


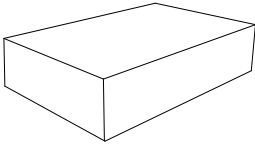



















# Assembly Installation


## Inset Set VD30

	Item	Name			Parts	QTY	
		Tool Needed Screwdriver or Power Drill	2			Cam-lock Wheel	10
		A-1	1			4*16 MM Screw	32
		A-2	1			Cam-lock Post	10
		B	1			4*30MM Screw	2
		C	1			21 Inch Track	1 Pair
		J	1			Track Bracket	2
		F	1			Track Clip	2

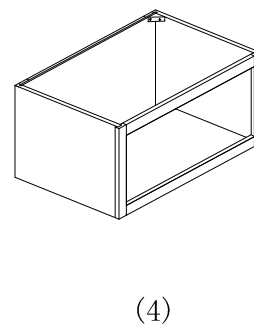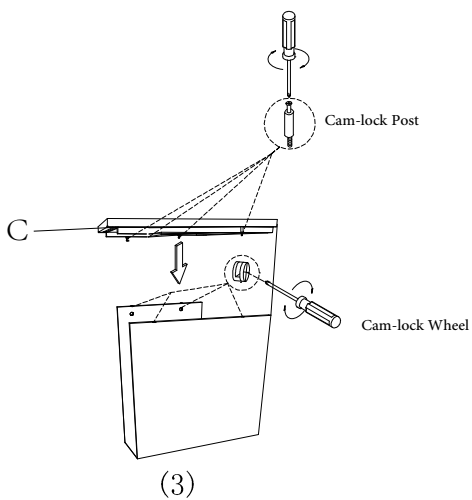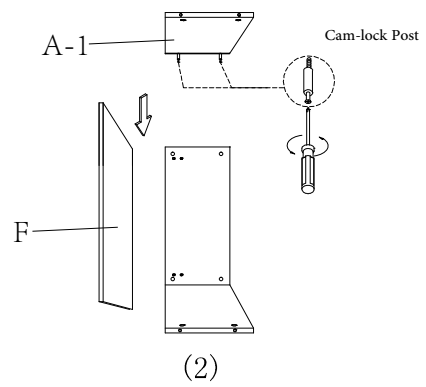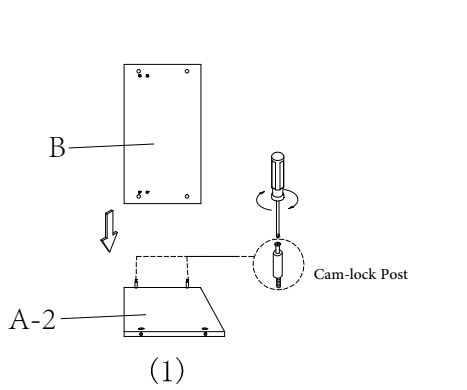


# Assembly Installation


## Inset Set VD30

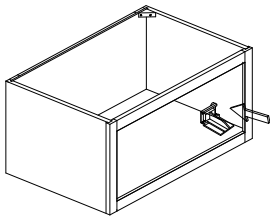


(5)

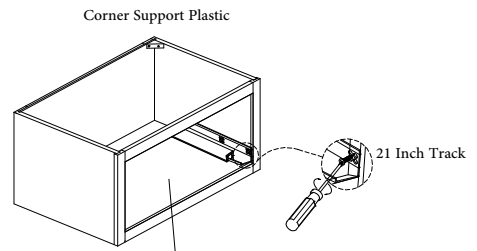

(6) F

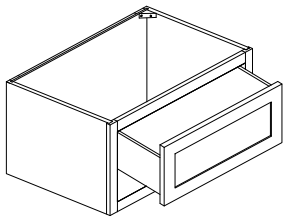


(7)

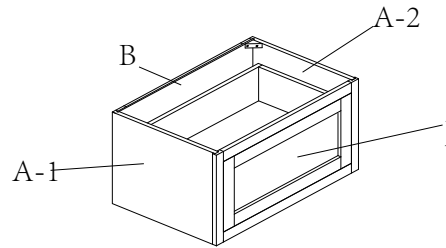


(8)


	Parts	QTY
	J-2	1
	J-3	1
	J-1	1
	J-4	1
	Track Clip	2

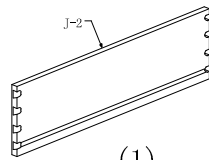


(1)

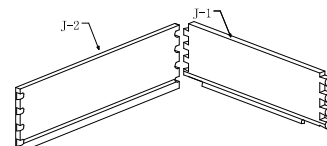


(2)

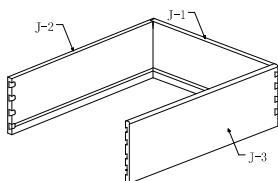

(3)

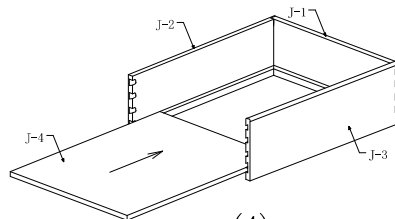

(4)

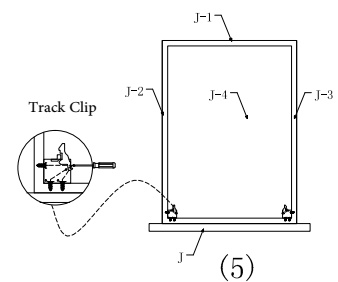

(5)